




Constructing a Seesaw

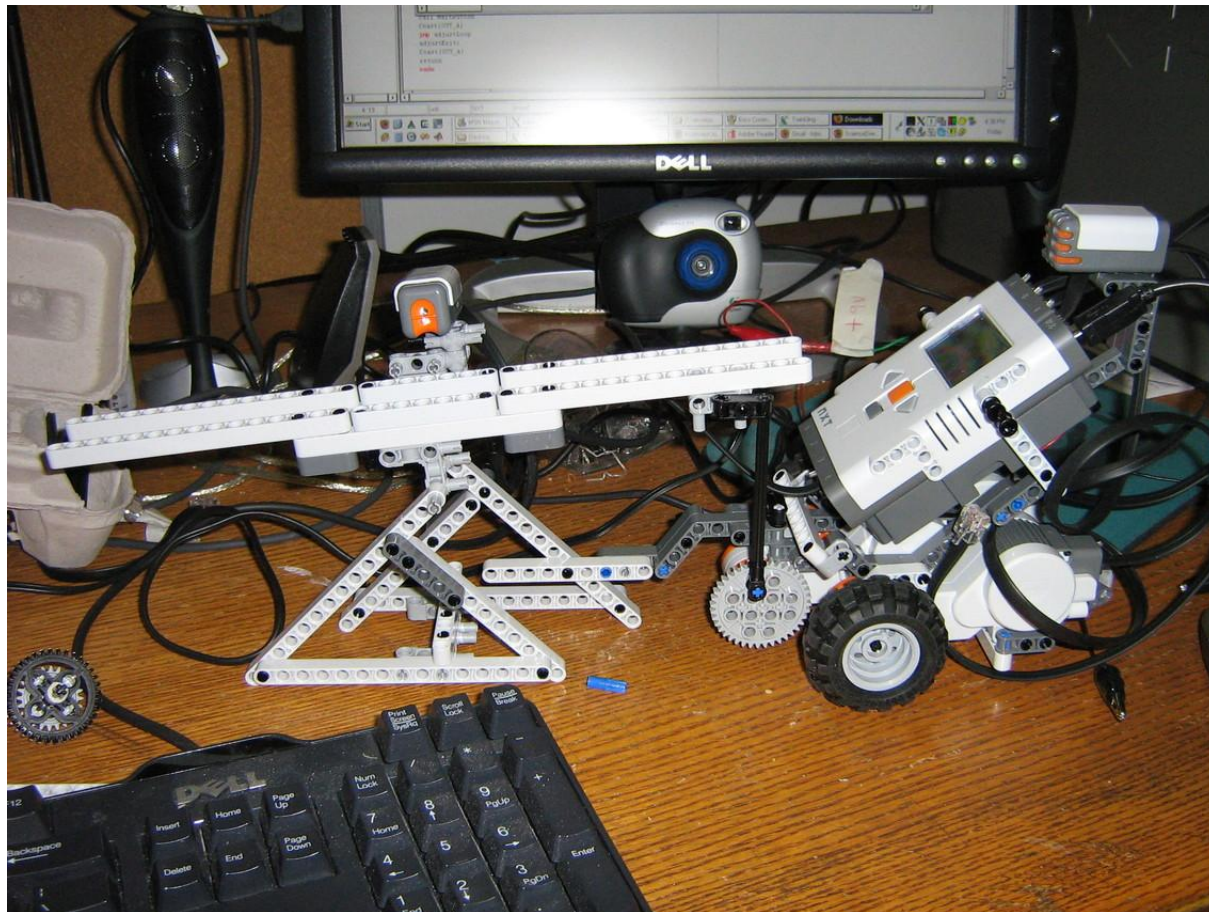


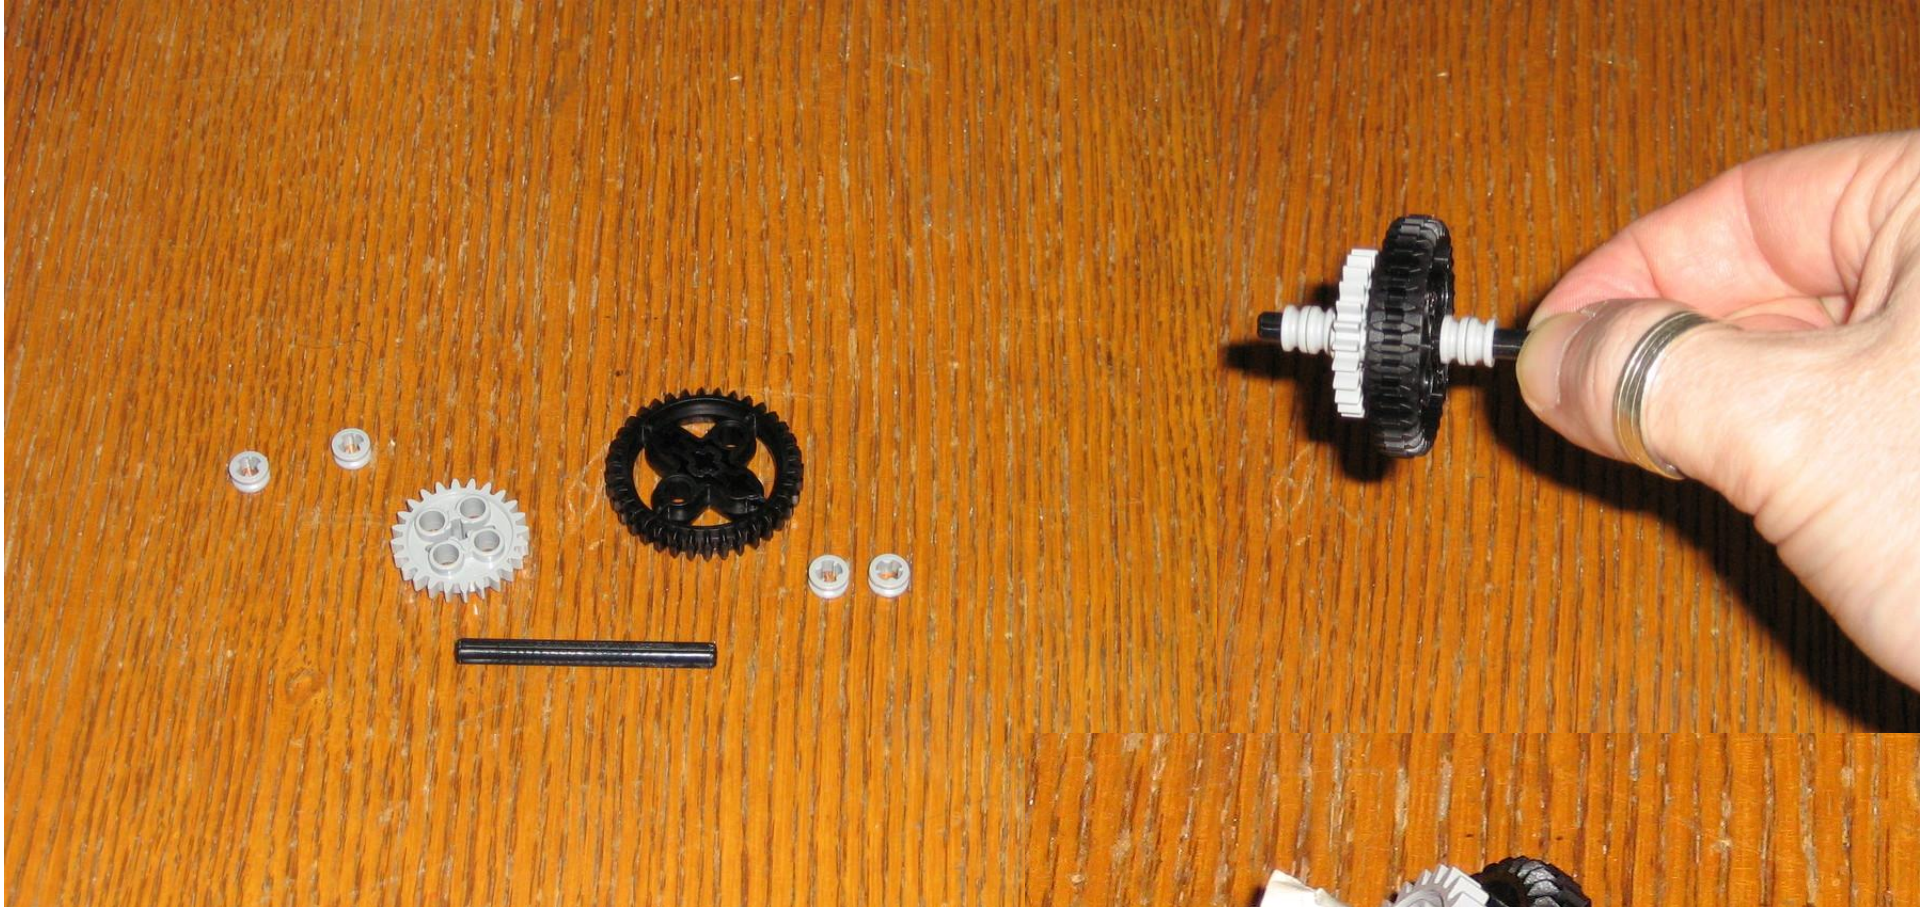



Use a thin layer of masking tape to make the rolling edges of the wheel flat and smooth

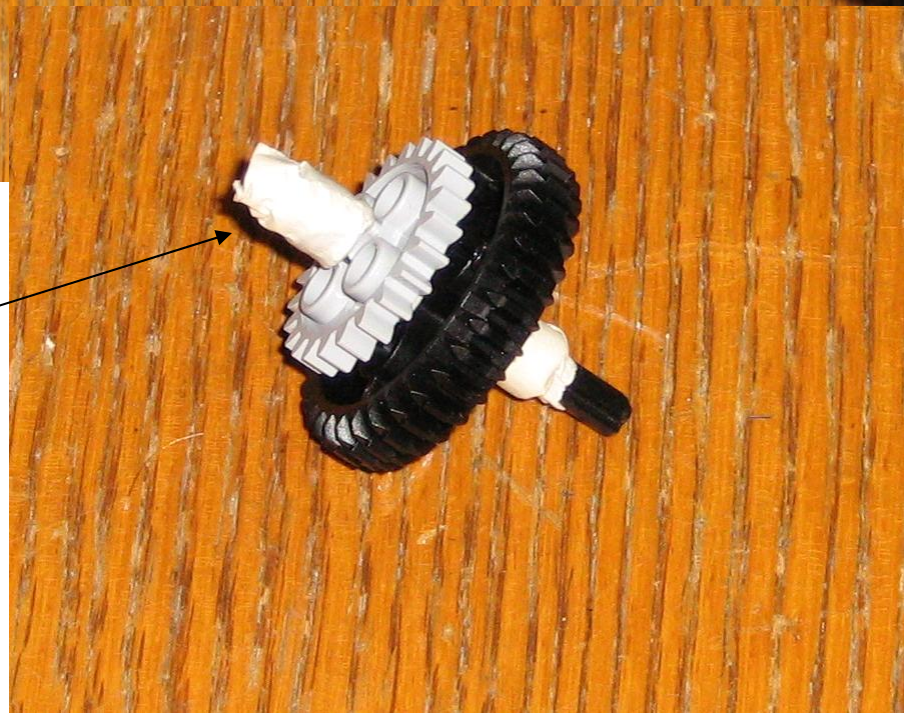


The frame

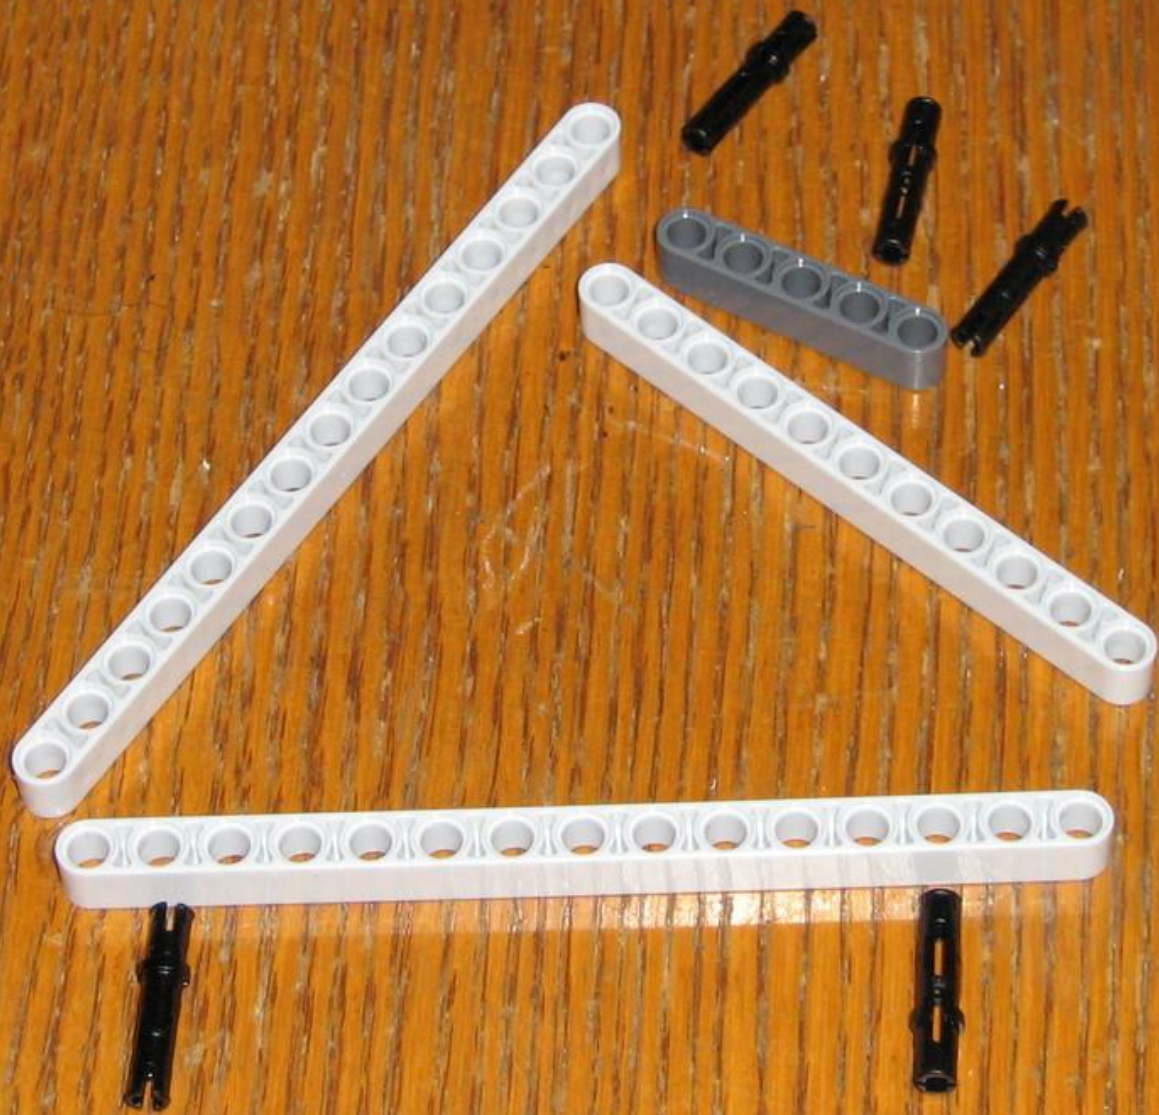

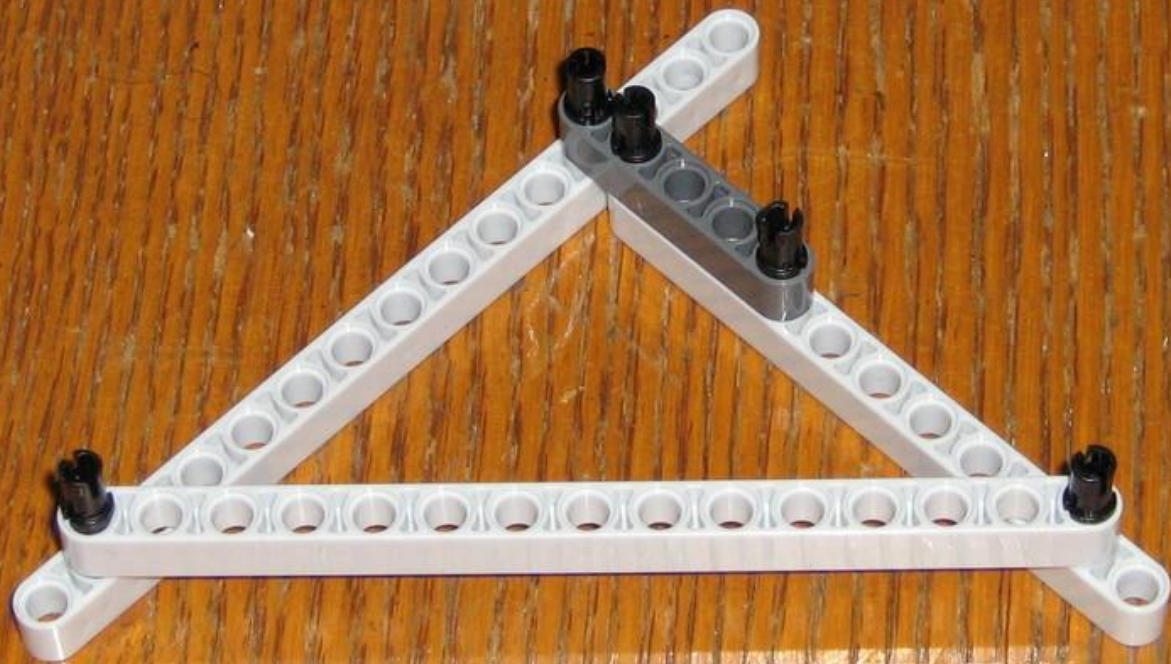


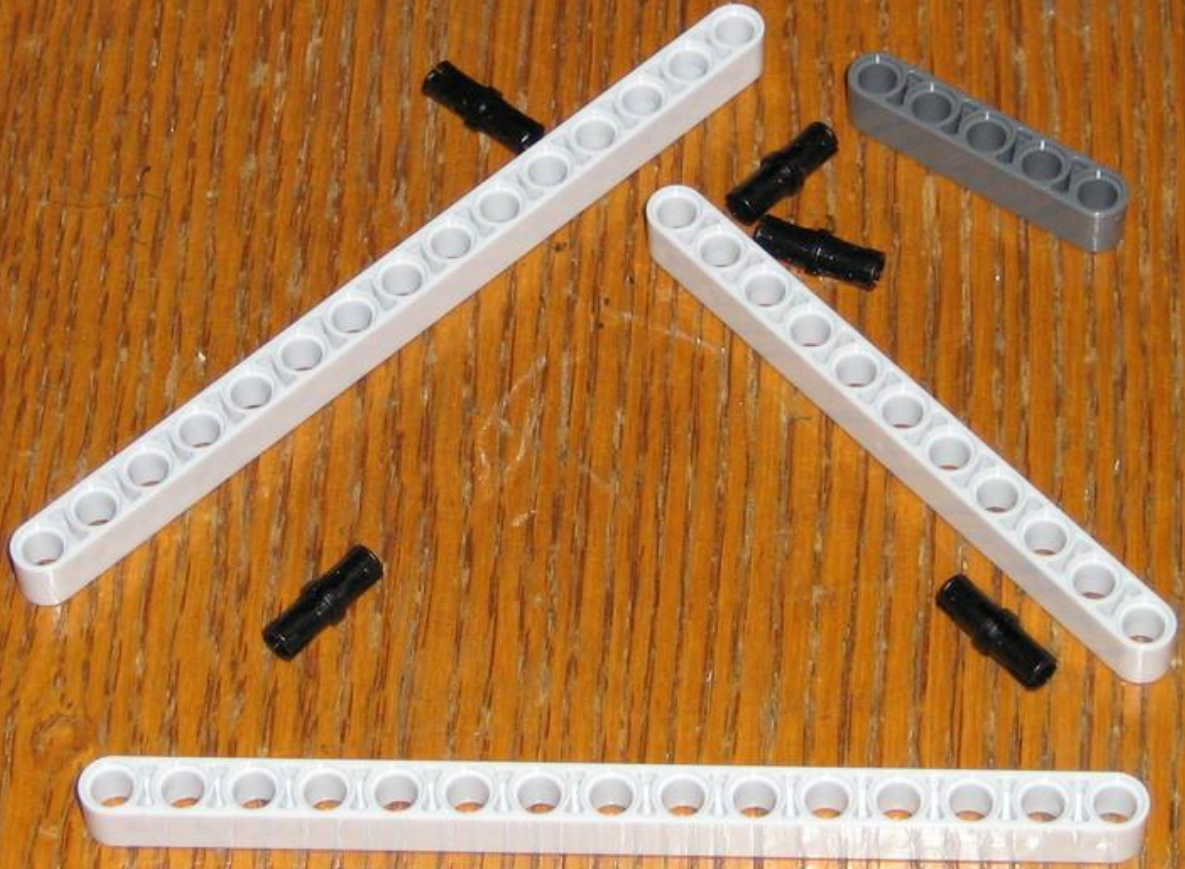

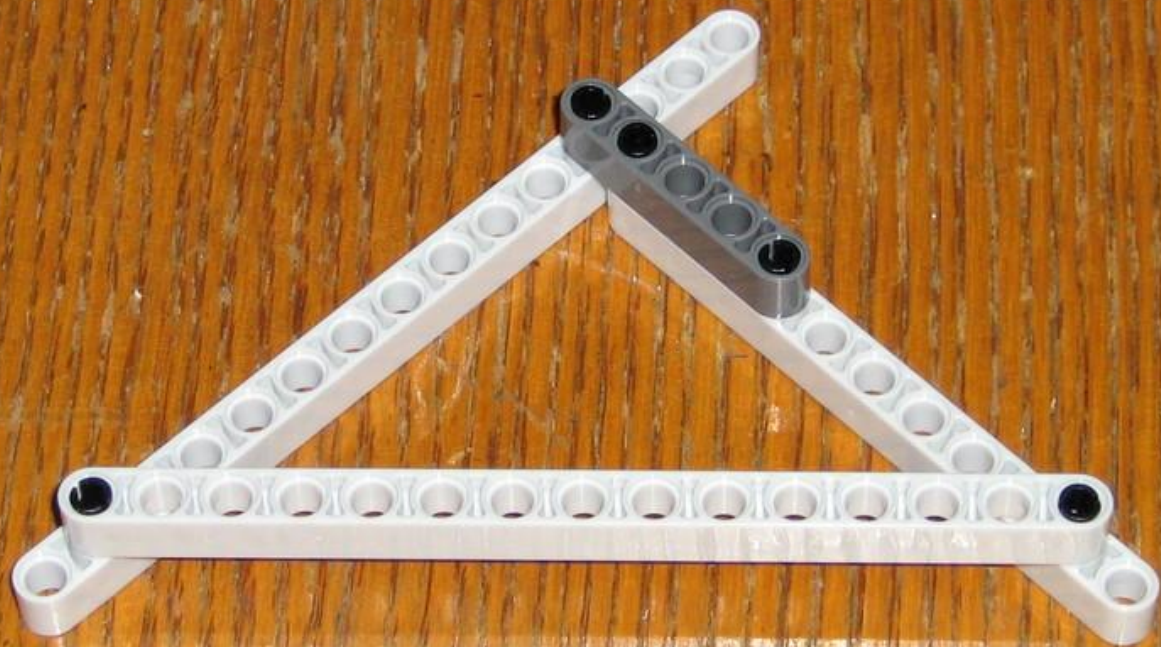






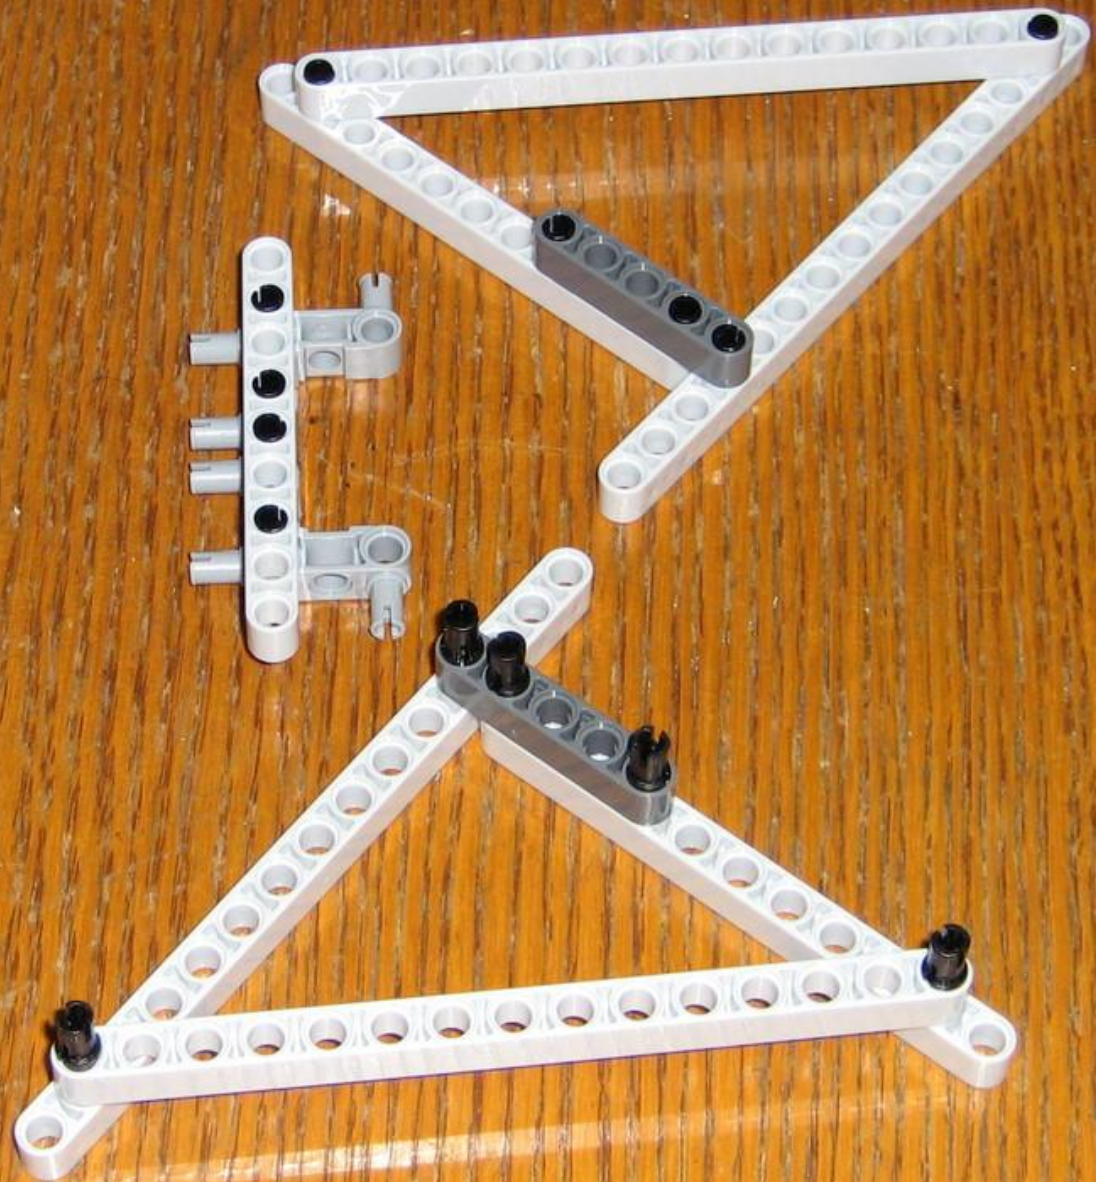




The tilting bar














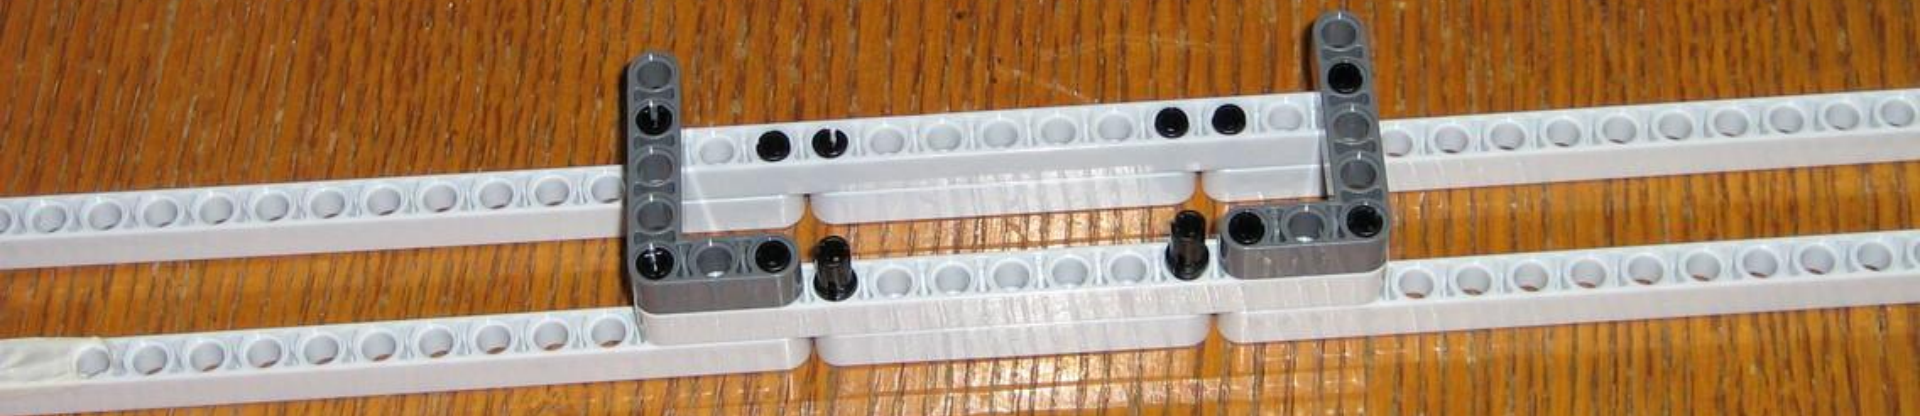



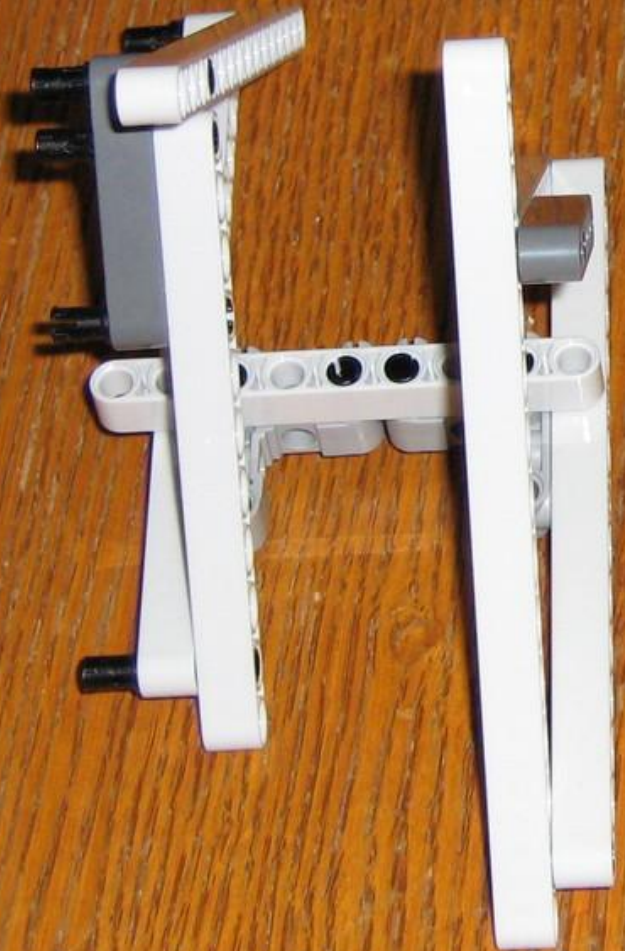

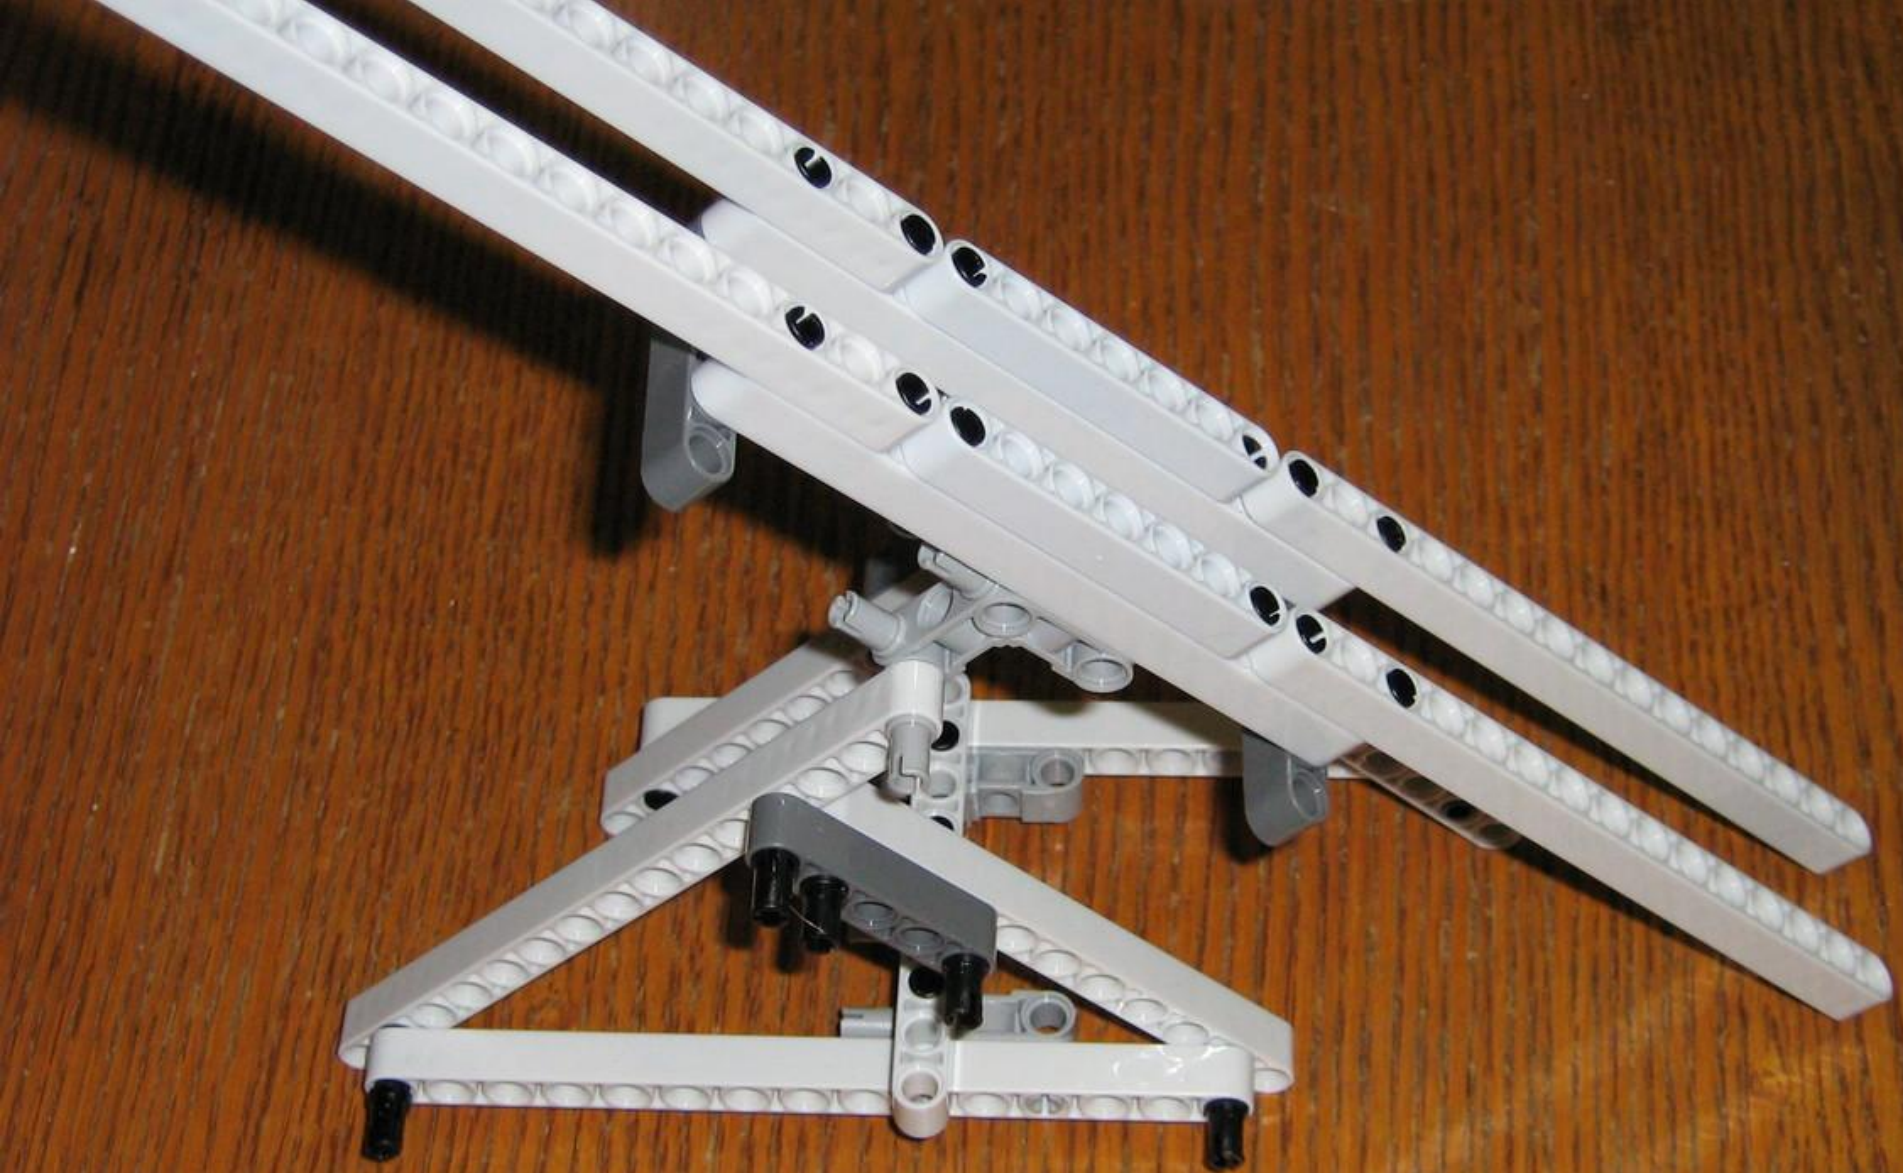


Light Sensor








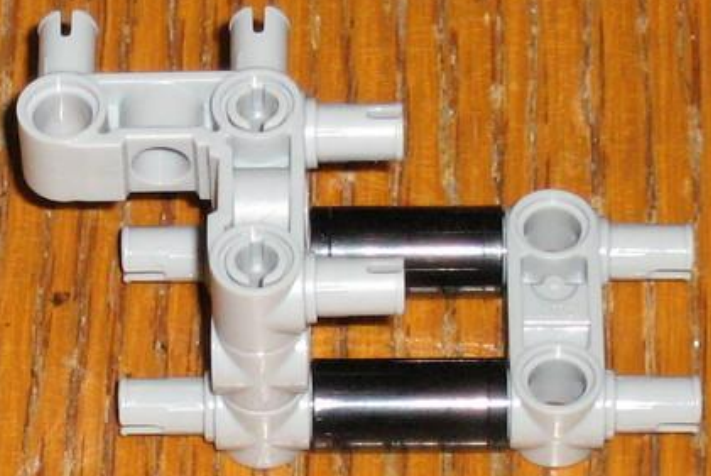




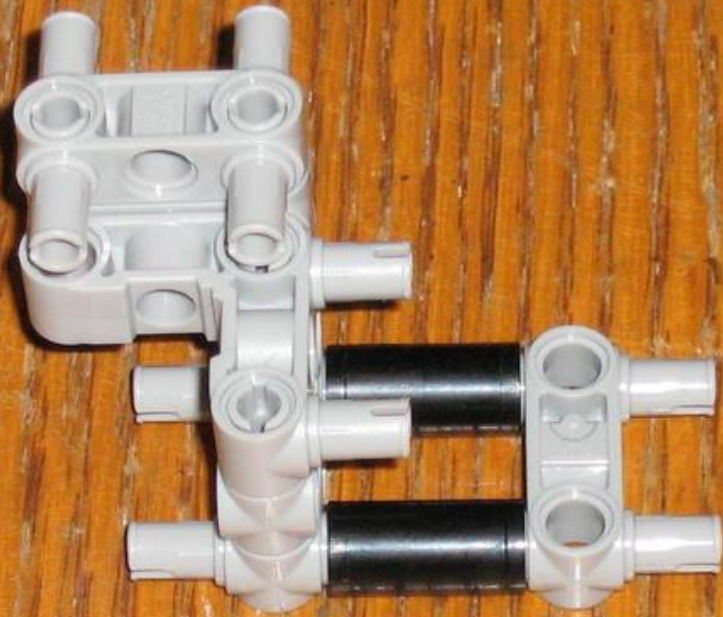





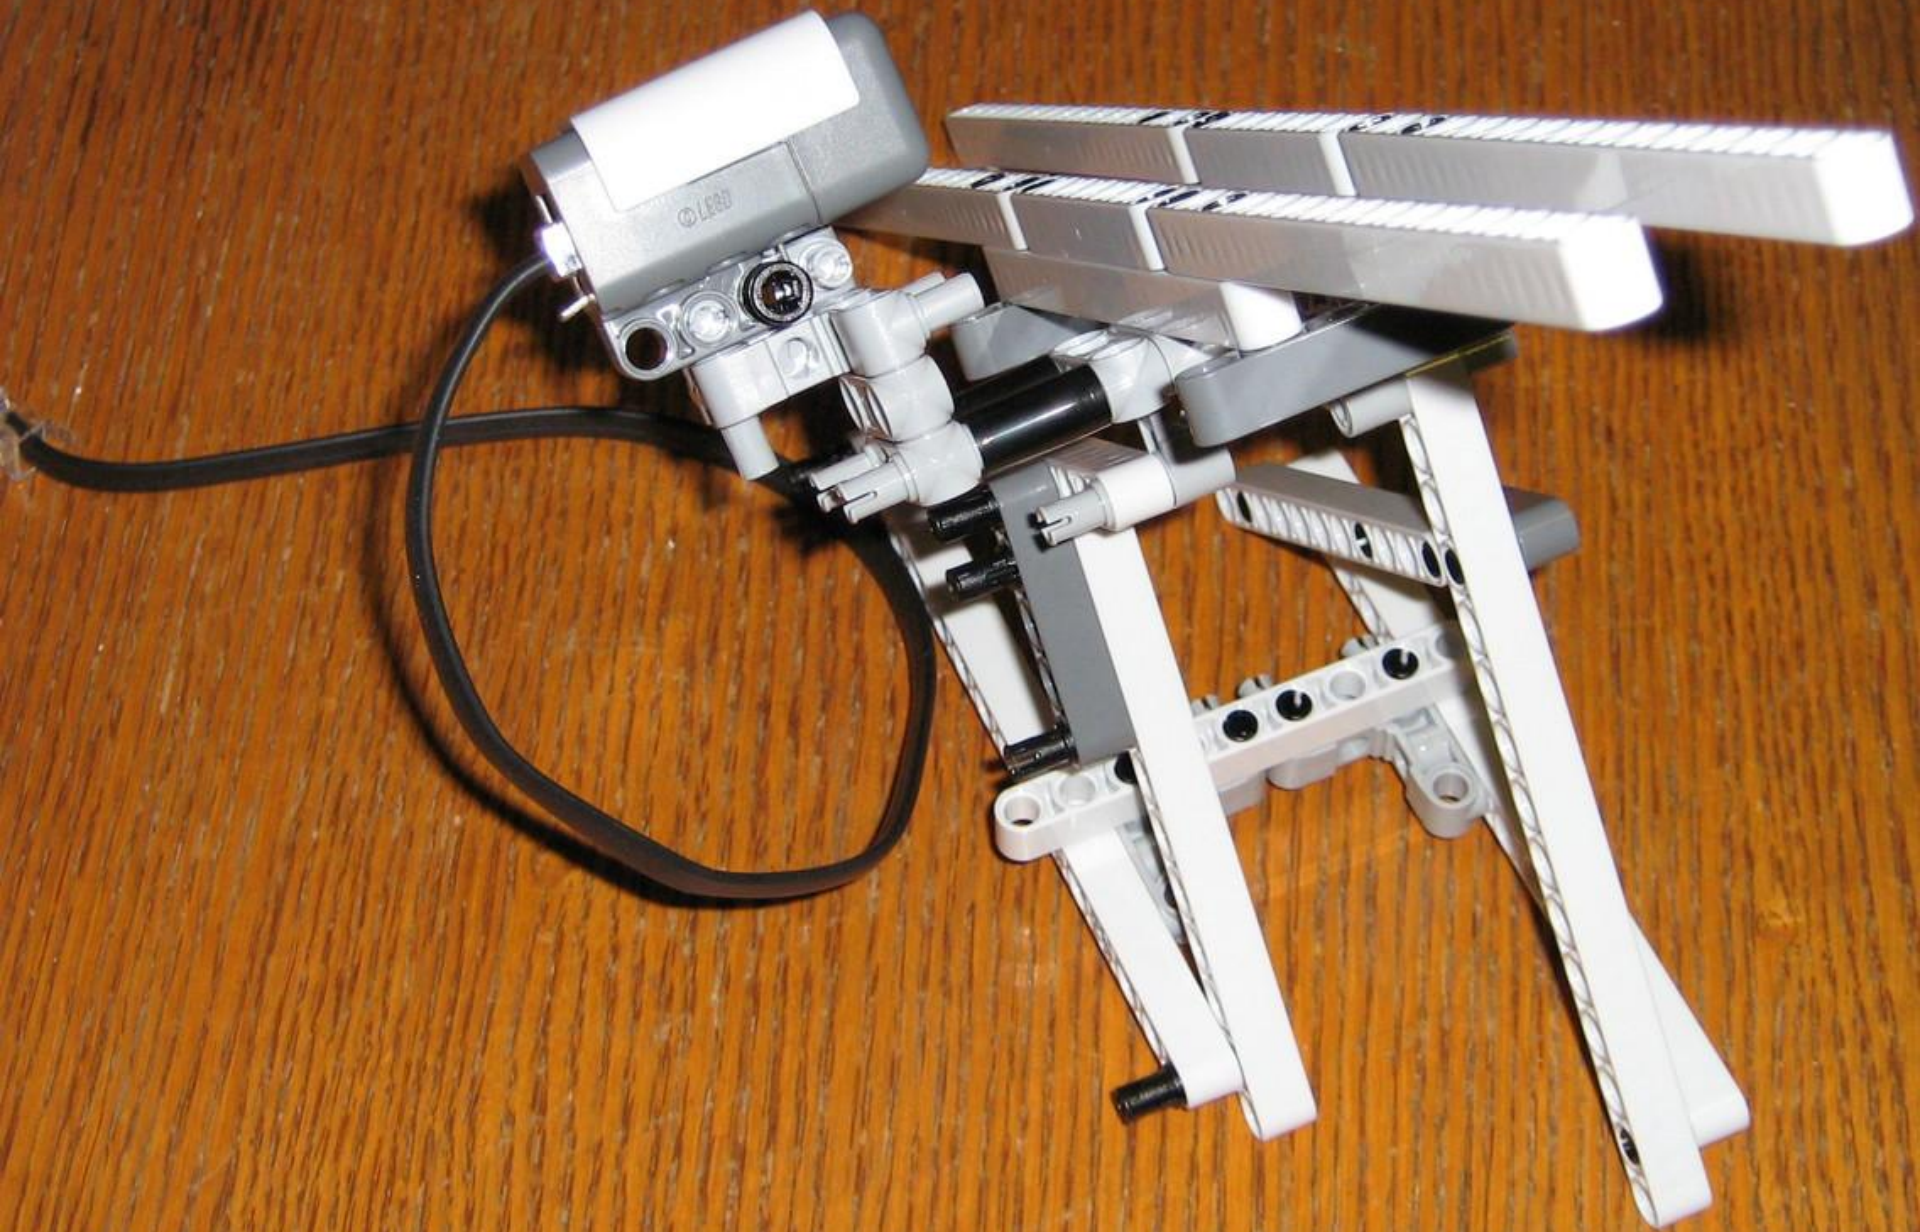

Attaching to the Tribot





